


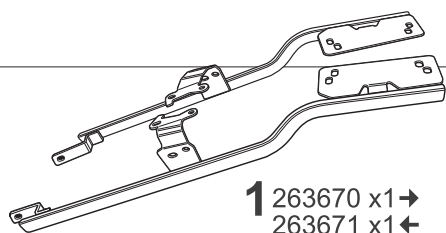

SHAD

BCN

HONDA CB 500 X '16-

**TOP MASTER
H0CX55ST**

1 263670 x1 →
263671 x1 ←

2 260648 x2
Ø16 Ø9 x 5

3 260417 x2
Ø16 Ø9 x16

4 303045 x2
Ø8

5 303027 x2
Ø8

6 304036 x2
M8x45 DIN 7380

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

ATTENTION: For a full equip assembly, mount the 3p system after the top master.

